



Preparation  
is key

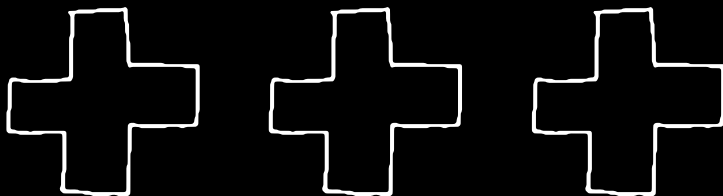

# Preparation is key - Prep Paste 2400

Spraygun maintenance is essential to ensure it works effectively. We suggest going through the following maintenance process at least once a week.

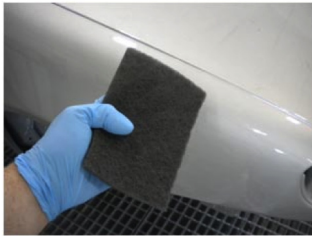

After the spraygun has been cleaned through the gunwash machine, but before being reassembled, remove fluid tip.



Apply sparingly into the centre of the flat pad placed in the palm of your hand.



Fold the weave pad over to create an impregnated preparation tool. This will enable the even distribution of the paste and make sure you get a controlled preparation of the entire panel using a minimal amount of product and extending the life of the pad.



When fully prepped wipe any excess paste from the panel, it removes without effort. Clean with waterbased pre-cleaner and you have a perfectly evenly keyed panel ready to accept your paint finish.



Use an applicator bottle and spray clean water all over the panel.

Lightly abrade the substrate using the impregnated pad.

